

# Fan Heater

## Installation and Operating Instructions

(Please read before using the heater)



 eurolux

## IMPORTANT SAFEGUARDS

Thank you for buying this Eurolux product. Please read the Instruction Manual carefully before operating the heater, then keep it for future reference.


- (1) Use your heater only on a flat surface.
- (2) Only connect your heater to a single phase socket with the main voltage as specified on the rating plate.
- (3) This heater meets the electromagnetic compatibility specified in EN 55104/95 concerning interference with radio and TV sets.
- (4) Do not leave your home while the heater is on, ensure that the switch is in OFF (O) position and the thermostat in minimum position. Always unplug the heater.
- (5) Keep combustible materials such as furniture, cushions, bedding, paper, clothes, curtains etc at least 1000mm away from the fan heater.
- (6) Always unplug when the heater is not in use. Do not pull the cord to unplug the heater.
- (7) Do not position your heater directly underneath a power point.
- (8) Keep the air inlet and outlet free from objects at least 1000mm in front of the heater and 500mm behind.
- (9) Do not let children or animals play with the heater whilst in operation, pay attention. The air outlet gets hot during operation (more than 80 degrees centigrade, or 175 degrees Fahrenheit).
- (10) Do not use your heater where there are flammable liquids such as cleaning fluids or petroleum products.
- (11) Do not cover your heater. If covered this could lead to overheating.
- (12) Do not use this heater in the immediate surroundings of a bath, shower or swimming pool.
- (13) If the cord of your heater is damaged discontinue use of the heater and return it to your authorised Eurolux agent.
- (14) Keep your heater clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, fire or damage to the heater.
- (15) Do not allow children or infirm persons to use the heater without proper supervision.

## INSTALLATION

This heater requires no installation, it should be used solely as a portable appliance.

Portable heaters are not suitable for use in a bathroom.

## OPERATING INSTRUCTIONS

- (1) Turn the thermostat knob (right) in a clockwise direction until it reaches the maximum setting 
- (2) Summer service (ventilation only): turn the knob to setting
- (3) Heating at reduced power: turn the knob (right) to setting I (1000W)
- (4) Heating at full power: turn the knob (right) to setting II (2000W)
- (5) Switching off: turn the knob (left) to setting

## REGULATING THE THERMOSTAT

When the room has reached the required temperature turn the right thermostat knob (where included) in an anti-clockwise direction up to the point where the heater switches off and not beyond. The temperature fixed in this way will be automatically regulated and kept at a constant level by the thermostat.

## MAINTENANCE

Before cleaning always turn the heater off and remove the plug from the power source.

Clean the air inlet and outlet grilles frequently, never use abrasive powders or solvents.

## WARNINGS

- (1) Do not use the heater in the vicinity of showers, bath tubs, wash basins, swimming pools etc.
- (2) Always use the heater in an upright position.
- (3) Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles – overheating could result.
- (4) The heater must be positioned at least 500mm from furniture or other objects.
- (5) Do not place the heater against walls, furniture etc.
- (6) The heater should not be plugged into a power source that can be reached by a person using a bath tub, shower or wash basin.
- (7) This heater comes with a Y-type connection. Replacement of the feed cable must only be entrusted to an authorised Eurolux agent.
- (8) The heater must not be positioned directly underneath a fixed power point.
- (9) Do not use the heater in rooms less than 2 square metres.

## OVERHEAT PROTECTION

The heater is fitted with a safety device which will switch the heater off in the case of accidental overheating (eg obstruction of inlet and outlet grilles, motor turning slowly or not at all). To reset disconnect the plug from the power source for a few minutes, remove the cause of the overheating then plug the heater in again. If the heater fails to operate return it to your authorised Eurolux agent.

## SPECIFICATIONS

Power supply: 240V-50Hz  
Current rating: 1000W/2000W