


Ceramic Tower Fan Heater

Installation and Operating Instructions


(Please read before using the heater)

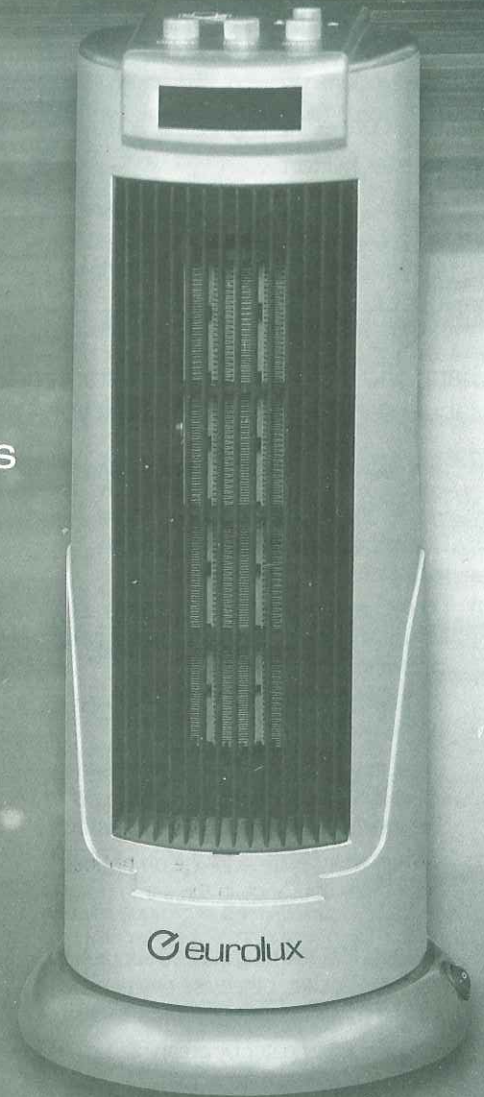

 eurolux

FEATURES

- (1) Top panel
- (2) Air outlet
- (3) Base
- (4) Warning symbol
- (5) Oscillation button
- (6) On/Off button
- (7) 1000W Heat selection
- (8) 2000W Heat selection
- (9) Handle
- (10) Back panel
- (11) Master button
- (12) Filter
- (13) Power cord

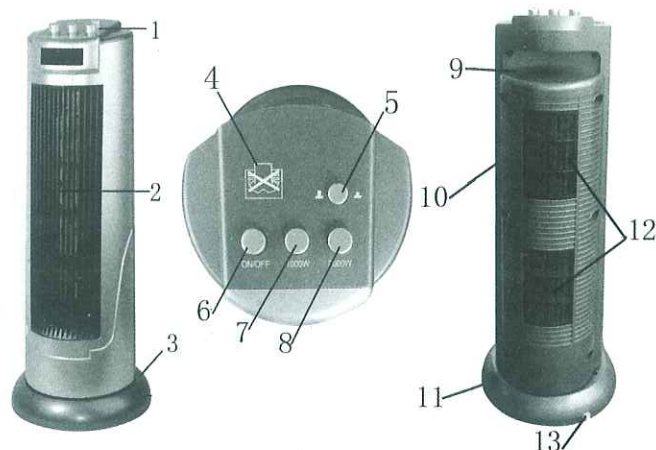

IMPORTANT SAFEGUARDS

Thank you for buying this Eurolux product. Please read the Instruction Manual carefully before operating the heater, then keep it for future reference.

- (1) Use your heater only on a flat surface.
- (2) Do not lay your heater on its side.
- (3) Do not position your heater directly underneath a power point.
- (4) Do not use your heater where there are flammable liquids such as cleaning fluids or petroleum products.
- (5) It is absolutely necessary to ensure the following warnings are adhered to:
 - Before you plug your heater in make sure that the power source conforms to electrical requirements of your heater.
 - When your heater is in use do not use any other appliance in the same power outlet.
 - Ensure that the plug is fitted securely into the socket, otherwise overheating and a possible malfunction could occur.
 - Unplug your heater by grasping the plug and pulling it from the socket, never pull the power cord.
- (6) Do not allow children or infirm persons to use your heater without proper supervision.
- (7) If the power cord is damaged do not use your heater but return it to an Authorised Eurolux Service Agent for replacement, continued use could result in creating a dangerous electrical situation.
- (6) Do not use your heater near a wet surface.
- (7) Ensure that your heater is placed on a flat surface, make sure that both the air intake and outlet openings are not blocked or covered.
- (8) Covering your heater with clothes, towels or other items could cause a fire.
- (9) Do not insert any objects through the grille and into the interior of your heater.
- (10) Do not place your heater on a soft surface like a bed.

- (11) Do not use your heater outdoors.
- (12) If your heater malfunctions return it immediately to the nearest Authorised Eurolux Service Agent.

POSITIONING THE HEATER

Your heater should only be operated at a minimum distance of 500mm from any wall or other objects, preferably 1 metre from curtains etc. Position your heater to optimise the air-flow to heat the room effectively.

OPERATING INSTRUCTIONS

- (1) Carefully remove your heater from the plastic bag and carton.
- (2) Place your heater on a firm level surface.
- (3) Set the master button to 'OFF', then plug your heater into a 220-240 volt AC electrical outlet. Turn the master button "ON", then press the ON/OFF button, your heater will blow cool air automatically, then select the 2000W setting to heat the room.
- (4) Once the desired temperature has been reached select a lower setting, eg 1000W to reduce the electrical consumption and keep the temperature of the room at a comfortable level.
- (5) A power indicator light has been provided to tell you at a glance whether your heater is on or off.
- (6) To turn your heater OFF, press the ON/OFF button.

WARNING

Before removing the plug from the power outlet, switch the heater off and allow the fan to run for 30-60 seconds to allow the inner components to cool down.

OSCILLATING BUTTON

Your heater also has an oscillation function. To switch the oscillation function on press the oscillation switch on the control panel, to stop press the oscillation switch again. When the

oscillation function is engaged your heater will oscillate 45 degrees to the right and left.

OVERHEAT PROTECTION

Your heater is protected against overheating, should this occur your heater will switch off automatically. Overheating can be caused by the total or partial obstruction of the grilles. When it occurs un-plug your heater, wait approximately 30 minutes for it to cool down and then remove the obstruction. Your heater can then be switched on, your heater should operate normally, however should the problem persist please contact your nearest Authorised Eurolux Service Agent.

Your heater will also automatically cut off if it is tipped over, should this happen unplug the heater wait until it cools down, restore it to an upright position on a flat surface and then plug it into the power point and turn your heater on, again should it fail to operate please contact your nearest Authorised Eurolux Service Agent.

MAINTENANCE

- (1) When your heater requires cleaning turn your heater off and wipe the exterior surfaces with a moistened cloth, do not rinse directly with water and do not use abrasive cleaners.
- (2) When the filters become dirty pull them out and clean them.
- (3) If a problem occurs with your heater do not attempt to dismantle it yourself instead take it to an Authorised Eurolux Service Agent or to the retailer it was purchased from.

SPECIFICATIONS

Power supply: 240V-50Hz
Current rating: 1000W/2000W