 


Code/Model No: CH20R

Ceramic Tower Fan Heater with Remote

 
**Installation and
Operating Instructions**
(Please read before using the heater)

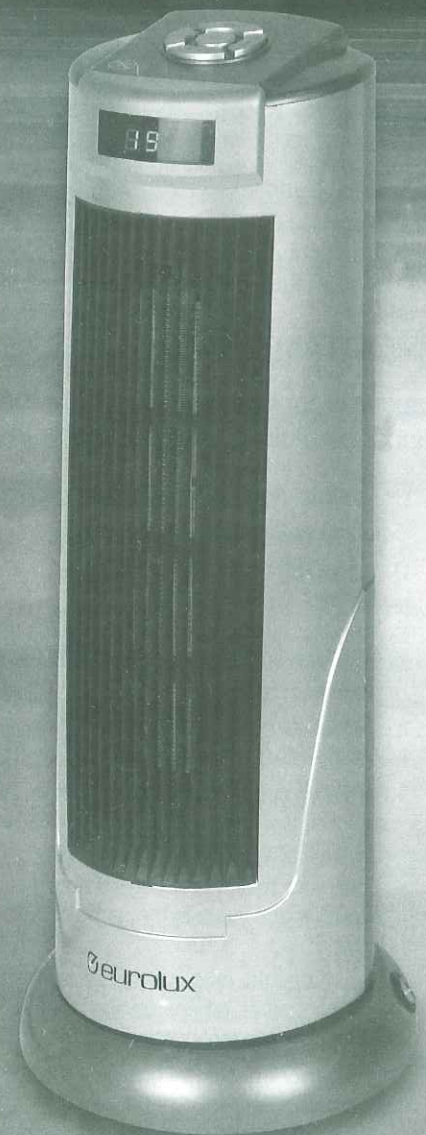

 eurolux

FEATURES

- (1) Top panel
- (2) Air outlet
- (3) Base
- (4) Oscillation button
- (5) Heat settings
- (6) Timer
- (7) Heater mode
- (8) On/Off switch
- (9) LCD panel
- (10) Handle
- (11) Back panel
- (12) Master button
- (13) Filter
- (14) Power cord

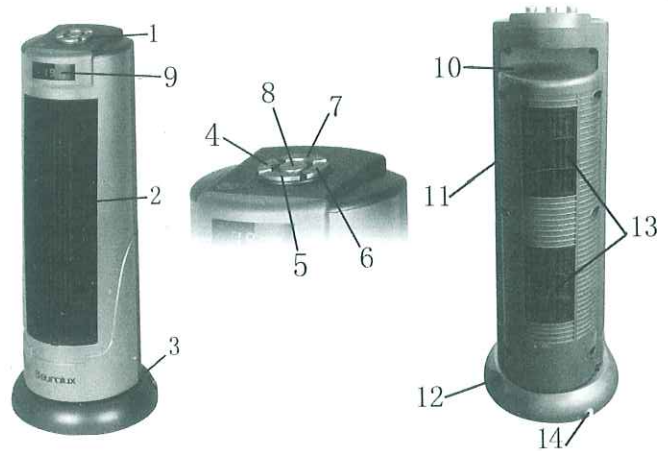

IMPORTANT SAFEGUARDS

Thank you for buying this Eurolux product. Please read the Instruction Manual carefully before operating the heater, then keep it for future reference.

- (1) Use your heater only on a flat surface.
- (2) Do not lay your heater on its side.
- (3) Do not position your heater directly underneath a power point.
- (4) Do not use your heater where there are flammable liquids such as cleaning fluids or petroleum products.
- (5) It is absolutely necessary to ensure the following warnings are adhered to:
 - Before you plug your heater in make sure that the power source conforms to electrical requirements of your heater.
 - When your heater is in use do not use any other appliance in the same power outlet.
 - Ensure that the plug is fitted securely into the socket, otherwise overheating and a possible malfunction could occur.
 - Unplug your heater by grasping the plug and pulling it from the socket, never pull the power cord.
- (6) Do not allow children or infirm persons to use your heater without proper supervision.
- (7) If the power cord is damaged do not use your heater but return it to an Authorised Eurolux Service Agent for replacement, continued use could result in creating a dangerous electrical situation.
- (6) Do not use your heater near a wet surface.
- (7) Ensure that your heater is placed on a flat surface, make sure that both the air intake and outlet openings are not blocked or covered.
- (8) Covering your heater with clothes, towels or other items could cause a fire.
- (9) Do not insert any objects through the grille and into the interior of your heater.
- (10) Do not place your heater on a soft surface like a bed.

- (11) Do not use your heater outdoors.
- (12) If your heater malfunctions return it immediately to the nearest Authorised Eurolux Service Agent.

POSITIONING THE HEATER

Your heater should only be operated at a minimum distance of 500mm from any wall or other objects, preferably 1 metre from curtains etc. Position your heater to optimise the air-flow to heat the room effectively.

OPERATING INSTRUCTIONS

- (1) Carefully remove your heater from the plastic bag and carton.
- (2) Place your heater on a firm level surface.
- (3) Set the master button to 'OFF', then plug your heater into a 220-240 volt AC electrical outlet.
- (4) Turn the master button "ON", then press the ON/OFF button, your heater will display the current room temperature in the LCD panel, automatic into FAN mode blowing cool air.
- (5) Upon pressing the MODE button, the unit will be in the low heat mode.
- (6) Pressing the MODE button a second time will set the heater into the high heat mode.
- (7) Pressing the MODE button once more will set the heater into AUTO mode. The symbol @ will now be displayed in the LCD panel (see thermostat instructions). Press again and the heater will blow cool air and the indicator light will be illuminated.
- (8) To turn the heater OFF, press the ON/OFF button.

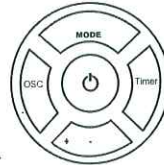 


Figure 1.

WARNING

Before removing the plug from the power outlet, switch the heater off and allow the fan to run for 30-60 seconds to allow the inner components to cool down.



OSCILLATING BUTTON

Your heater also has an oscillation function. To switch the oscillation function on press the oscillation switch on the control panel, to stop press the oscillation switch again. When the oscillation function is engaged your heater will oscillate 45 degrees to the right and left.

TIMER FUNCTION

This function will work in any mode. The timer function allows you to set the length of operation from 1 to 8 hours. Each time the timer button is pressed you will increase the timer operation by 1 hour. Once the timer has been set the timer will count down the hours in 1 hour increments, showing in the LCD panel the remaining time until the heater switches itself off. Pressing the timer button once more at the completion of the 8 hours will reset the heater to run continuously.

THERMOSTAT INSTRUCTIONS

- (1) Press the HEATER MODE button until the display shows "@"
- (2) To adjust temperature, press the  to increase the desired temperature and  to decrease the desired temperature.
- (3) When the air temperature reaches 3 degrees above the set temperature, the heater will cut off.
- (4) When the air temperature drops 1 degree below the set temperature, the unit will come back on.
- (5) Temperature can be set from 15 degrees to 30 degrees.

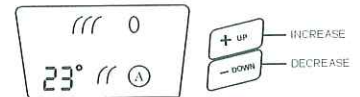 


Figure 2.

REMOTE CONTROL

- (1) Install 2 x AAA batteries (not included) as shown in Figure 3.
- (2) The remote control button is labelled as such.

The functions performed with the remote control are identical to those of the manual control.

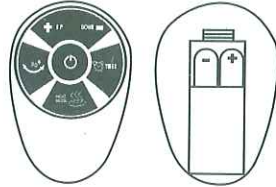 


Figure 3.

OVERHEAT PROTECTION

Your heater is protected against overheating, should this occur your heater will switch off automatically. Overheating can be caused by the total or partial obstruction of the grilles. When it occurs un-plug your heater, wait approximately 30 minutes for it to cool down and then remove the obstruction. Your heater can then be switched on, your heater should operate normally, however should the problem persist please contact your nearest Authorised Eurolux Service Agent.

SAFETY CONTROL

To avoid damage and danger by overheating your heater is fitted with super protection that switches the heater off in the event of overheating until the temperature drops to a safe level.

MAINTENANCE

- (1) When your heater requires cleaning turn your heater off and wipe the exterior surfaces with a moistened cloth, do not rinse directly with water and do not use abrasive cleaners.
- (2) When the filters become dirty pull them out and clean them.
- (3) If a problem occurs with your heater do not attempt to dismantle it yourself instead take it to an Authorised Eurolux Service Agent or to the retailer it was purchased from.

SPECIFICATIONS

Power supply: 240V-50Hz
Current rating: 1000W/2000W

AUTHORISED SERVICE AGENT ADDRESSES

SYDNEY – HEAD OFFICE

Telephone (02) 9384 5678
Facsimile (02) 9666 1318

QUEENSLAND

Telephone (07) 3266 0444
Facsimile (07) 3266 7511

NEWCASTLE

Telephone (02) 4960 9266
Facsimile (02) 4960 9277

NEW ZEALAND

Innovative Agencies
Telephone (03) 3328952
Facsimile 9428 1595

CANBERRA

Telephone (02) 6280 7099
Facsimile (02) 6280 7137

WAGGA WAGGA

Telephone (02) 6922 8600
Facsimile (02) 6922 8611

VICTORIA

Telephone (03) 9795 1177
Facsimile (03) 9795 1017

SOUTH AUSTRALIA

Telephone (08) 8346 1888
Facsimile (08) 8340 1034

WESTERN AUSTRALIA

Telephone (08) 9478 0466
Facsimile (08) 9478 0470

TASMANIA

Telephone (03) 6334 8166
Facsimile (03) 6334 8177

 eurolux